


Installing the TileVision® – Sealing

Note: It is the installer's responsibility to ensure that the TileVision® is installed and sealed correctly, failure to do so will invalidate the guarantee.

Sealing the TileVision®

When correct function has been confirmed, switch the TileVision® to standby and set the isolation switch to off. Apply clear silicone sealant to the joint between the sides of the back box and the sides of the TileVision®. Ensure that the sealant is worked into the space evenly and is applied without any gaps, bubbles or voids. Wipe any excess sealant away and check for any imperfections. Rectify any errors as necessary.


fill the space between the edge of the TileVision® and the back box

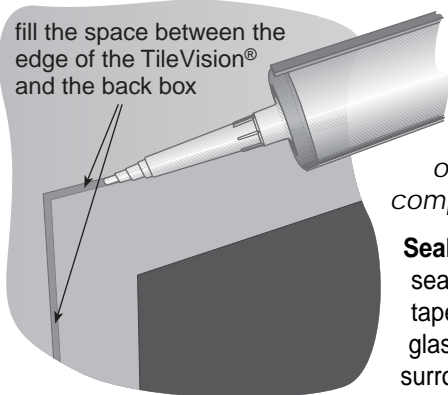

This seal is essential for the reliable and safe operation of the TileVision® and must be completely waterproof.

Sealing Tip: To achieve a neat seal apply lengths of masking tape around the TileVision® glass screen and the surrounding tiles. Leave sufficient gap to apply the sealant

around the joint between the sides of the back box and TileVision®. Once the sealant has set and the masking tape removed the acrylic surround can be fitted as shown below.


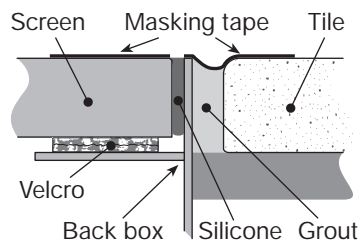


Fitting the mirrored acrylic surround

The mirrored acrylic surround is a cosmetic addition and has no bearing on the integrity of the waterproof seal of the TileVision®.

If the surround is being fitted to the TileVision®, the same silicone sealant used to seal the screen into the back box can be used to fasten the surround to the wall.

Lay the surround on a flat surface and apply the sealant to the matt grey side as shown. Once the sealant has been applied, align the surround with the TileVision® using a spirit level as a guide and press the surround firmly to the wall.

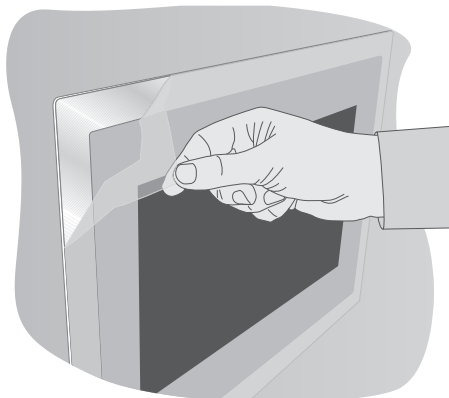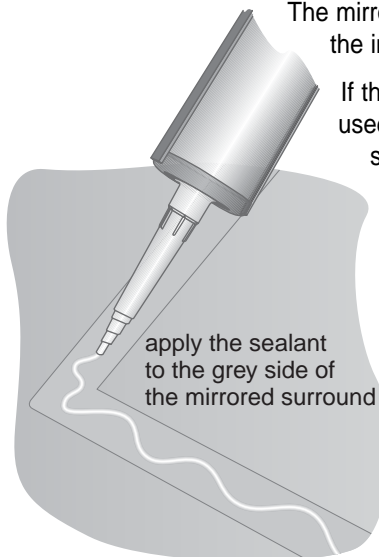

After the sealant has set the protective film can be removed from the front of the surround.

Cleaning Instructions

To clean the glass and surround, use only a soft damp cloth. Under no circumstances are abrasive cleaners to be used, failure to observe this warning will invalidate the guarantee.